

Cloud LM-2 Jumper Settings

Ref	Description	Default	Location	Notes
J1	Remote Source selection	LOCAL	Top PCB	Set to LINK to allow linked LM2 to control System Music Source.
J2*	Priority Source	MIC	Top PCB	Set to LM-2 when full priority over System Music is required.
J3	Remote Level selection	LOCAL	Top PCB	Set to LINK to allow linked LM2 to control System Music Level.
J4*	Mic over facility input priority	MIC	Top PCB	Set to MAX when full priority over System Music is required.

General Notes:

* J4 MUST be set to MAX when J2 is set to LM-2.